



INSTALLATION INSTRUCTIONS

Parts

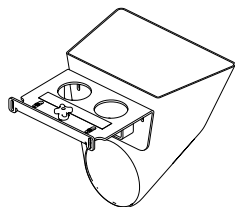

HOPPER x 1




1/4" - 20 x 1" BOLT x 2



1/4" - 20 x 7/8" BOLT x 2

Fig. 1

Tools Needed

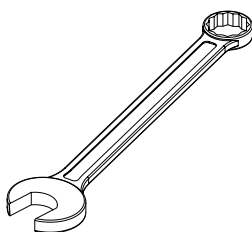

7/16" WRENCH



9/64" ALLEN KEY

Fig. 2


For additional assistance with assembly, Keirton Technical Support is available between 7 a.m. and 7 p.m. Pacific Standard Time, seven days a week at:

- 1-888-254-3204
- support@keirton.com

T2 HOPPER INSTALLATION

Attaching the Hopper to the T2 Trimmer

1. Remove the hopper bolts from one side of the T2 (see Fig. 3*).
2. Secure the hopper to the T2 with screws and the acorn nuts removed during step 1.
 - If connecting the hopper to the side of the T2 with the safety interlock, use the $\frac{1}{4}$ "-20 x 1" bolts (see Fig. 4).
 - If connecting the hopper to the side of the T2 **without** the safety interlock, use a $\frac{1}{4}$ "-20 x $\frac{7}{8}$ " bolts (see Fig. 5).

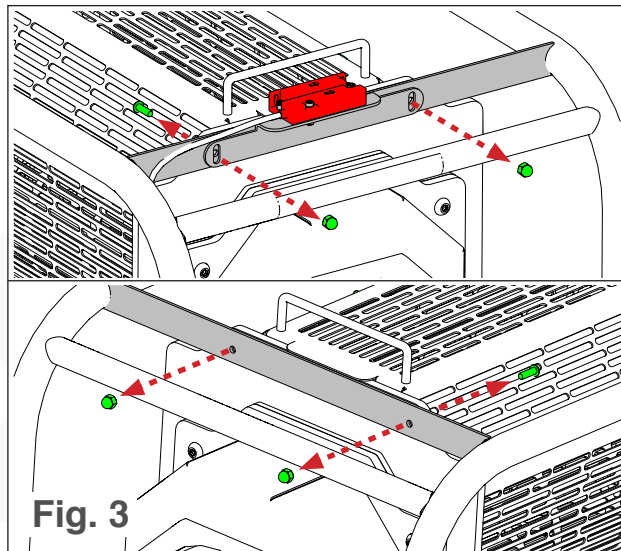

*Fig. 3 shows both options, only remove the hopper bolts from one side of the T2.

